




PARTS LIST FOR MODELS 720Z AND 722Z

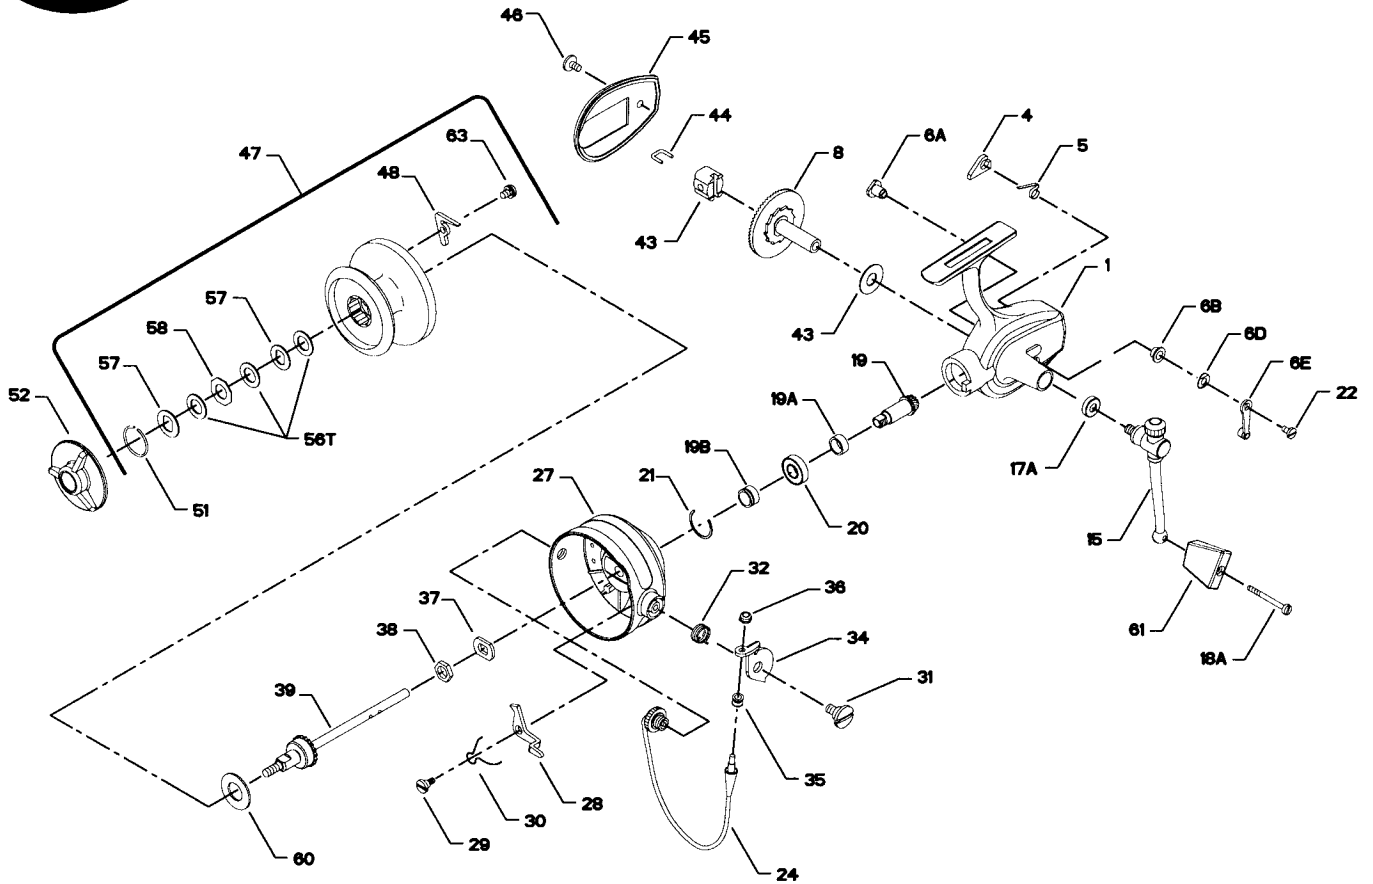

KEY NO.	DESCRIPTION	PART NO.
1	Housing w/Bushing	1-720Z
	Housing w/Bushing	1-722Z
4	Dog	4-720
5	Dog Spring	5-720
6A	Eccentric	6A-720
6B	Eccentric Liner	6B-720Z
6D	Eccentric Spring	6D-720
6E	Eccentric Lever	6E-710
8	Main Gear w/Ratchet	8-720
	Main Gear w/Ratchet	8-722
12	Main Gear Thrust Washer	12-722
15	Handle Assembly (Complete)	15-720Z
	Handle Assembly (Complete)	15-722Z
17A	Handle Cover Washer	17A-720
18A	Handle Screw	18A-720Z
19	Pinion Gear	19-720
	Pinion Gear	19-722
19A	Gear End Spacer (722Z only)	19A-722
19B	Rotor End Spacer (722Z only)	19B-722
20	Pinion Bearing	20-720
	Pinion Bearing	20-722
20A	Pinion Thrust Washer (720Z only)	*20A-720
21	Bearing Retainer (722Z only)	21-722
22	Eccentric Screw	22-109
24	Bail Wire	24-720
27	Rotor Cup	27-720Z
	Rotor Cup	27-722Z

KEY NO.	DESCRIPTION	PART NO.
28	Bail Release Arm	28-720
29	Bail Release Arm	29-720
30	Bail Release Spring	30-720
31	Bail Screw	31-710
32	Bail Spring	32-720
34	Bail Arm	34-720
35	Line Roller	35-720
36	Bail Lock Nut	36-700
37	Rotor Cup Washer	37-720
38	Rotor Cup Nut	38-720
39	Spool Shaft	39-720
43	Crosswind Block	43-720
44	Crosswind Connector	44-720
45	Housing Plate	45-720Z
	Housing Plate	45-722Z
46	Housing Plate Screw	46-720
47	Spool (Complete)	47-720Z
	Spool (Complete)	47-720Z
48	Click Tongue	48-720
51	Retaining Spring	51-710
52	Drag Knob	52-720Z
56T	Drag Washer (Teflon®)	56-710
57	Metal Slot Washer	57-720
58	Metal Washer (Octagon)	58-720
60	Rear Drag Washer	60-712
61	Handle Knob	61-720Z
63	Click Screw	63-349

*Not Shown